

**operating  
and maintenance  
INSTRUCTIONS**



**Radiation Survey Meter  
Jordan Model 710-4**

*FCDA Item No. CD V-710—Model No. 4*

**Jordan Electronics, Inc.**

3025 West Mission Road  
Alhambra, California



# TABLE OF CONTENTS

<b>1.0 general description . . . . .</b>	<i>Page</i> 3
<b>2.0 theory of operation</b>	
2.1 Ionization Chamber . . . . .	4
2.2 Electrometer Tube . . . . .	4
2.3 Measuring Circuit . . . . .	5
2.4 Circuit Check . . . . .	5
2.5 Zero Controls . . . . .	6
<b>3.0 installation</b>	
3.1 Inspection . . . . .	6
3.2 Batteries . . . . .	6
<b>4.0 operation</b>	
4.1 Operational Checks . . . . .	7
4.2 Taking Readings . . . . .	7
<b>5.0 operator's maintenance</b>	
5.1 Battery Replacement . . . . .	7
5.2 Cleaning . . . . .	7
<b>6.0 preventive maintenance . . . . .</b>	8
<b>7.0 corrective maintenance</b>	
7.1 Tools Required . . . . .	8
7.2 Disassembly . . . . .	8
7.3 Calibration . . . . .	9
7.4 Batteries . . . . .	9
7.5 Trouble Shooting . . . . .	9
<b>8.0 replaceable parts</b>	
8.1 Mechanical Components . . . . .	12
8.2 Maintenance Supply Parts . . . . .	13
8.3 Names and Addresses of Manufacturers . . . . .	13
8.4 Electrical Components . . . . .	15
<b>illustrations</b>	
Figure 1 — The Basic Circuit . . . . .	5
Figure 2 — The JORDAN 710-4 with Case Removed . . . . .	6
Figure 3 — The JORDAN 710-4 Disassembled for Servicing . . . . .	12
Figure 4 — Wiring Diagram . . . . .	14

---

# **operating and maintenance instructions**

---

## **1.0 GENERAL DESCRIPTION**

### **1.1 ranges**

The *Jordan 710-4* measures the intensity of gamma radiation up to 50 roentgens per hour (r/hr). Three ranges are provided, 0-.5, 0-5 and 0-50 r/hr. On the lowest (0-.5 r/hr) range, the small division on the scale is .02 r/hr and, by interpolation, measurements can be made in increments of .01 r/hr. Intensities higher than 50 r/hr are indicated by the meter reading off scale, and the instrument is not harmed.

### **1.2 ionization chamber**

The sensing element in the *Jordan 710-4* is an air equivalent plastic ionization chamber in an hermetically sealed steel enclosure. All the desirable qualities of the usual plastic chamber are maintained, while sealing the chamber minimizes the effects of temperature and eliminates the altitude and moisture effects.

### **1.3 spectral response**

The accuracy of this instrument is not affected by changes in energy level from .08 Mev (Million electron volts) to 1.2 Mev. This is the range required to measure gamma radiation of the various energies encountered in fission products.

### **1.4 accuracy**

The accuracy of this instrument is  $\pm 20\%$  when used in temperatures from  $-20^{\circ}\text{F}$  to  $+125^{\circ}\text{F}$ . The accuracy is not affected by altitude, and the instrument will not respond to light or radio frequency radiations. The case is watertight to withstand immersion, and the housing containing the critical measuring components is gasketed to prevent any effects of moisture. Under normal operating conditions the measuring error is less than 10%.

### **1.5 controls**

Two controls are provided. (See figure 1.) The RANGE SWITCH is used to turn on the instrument, check its proper functioning, and select the required range. The ZERO CONTROL is used to adjust the circuit to insure correct readings.

## **1.6 circuit check**

The proper functioning of the measuring circuit including the batteries may be checked by setting the range switch to **CIRCUIT CHECK** and observing the meter reading. The limits of acceptable indication cover the top 40% of the scale, and a reliable indication of the condition of the instrument is available.

## **1.7 batteries**

Two "D" size flashlight cells, NEDA type 13 and one 22.5 volt "B" battery, NEDA type 215 are used. The operating life for continuous duty is 200 hours and, for intermittent use, about twice this figure.

## **1.8 meter**

The meter in the *Jordan 710-4* uses the new core magnet movement. It will withstand the shock and vibration of rough field use, and it is sealed in a plastic case to prevent damage from dust and moisture.

## **1.9 physical features**

The instrument is approximately 4" wide, 7" long and 3" high, excluding the handle. The instrument weighs only 2 lbs. 4 oz. The case and handle are molded of tough, durable plastic and are reinforced to withstand high impact shock and rough treatment. A separate battery compartment is molded into the lower case to prevent leaky batteries from damaging other components. The *Jordan 710-4* has passed a rugged military shock test (MIL-T-17113) and will withstand considerable abuse without loss of accuracy.

# **2.0 THEORY OF OPERATION**

## **2.1 ionization chamber**

The sensing element of the *Jordan 710-4* is an hermetically sealed ionization chamber with air equivalent plastic walls. This comprises a cylindrical air container called the shell and a disc, centrally located within it, called the collector. The collector is insulated from the shell which is operated at a potential of approximately 22.5 volts positive with respect to the collector.

Gamma rays passing through the chamber shell cause the air molecules to become charged positively and thus become ions. Having a positive charge, the ions are repelled from the positive (+ 22.5V) shell, and they go to the collector. The number of ions thus formed is proportional to the intensity of the radiation.


The collection of these positive ions creates a current that flows from the chamber collector to the measuring circuit where it is amplified to operate the meter.

## **2.2 electrometer tube**

The very small ionization current from the chamber collector (.000003 microampere at .5 r/hr) flows through an extremely high resistor (160,000

### 2.3 measuring circuit

This supplies the required negative grid voltage. The meter M is connected in the cathode circuit of the electrometer tube. Changes in the grid voltage of the electrometer tube cause changes in the current flowing through the meter, thus producing the required indication.

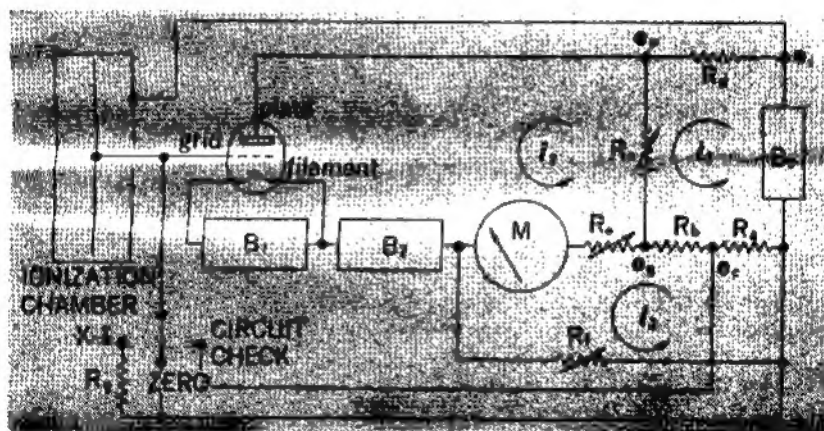

**Figure 1 – The Basic Circuit**

## 2.4 circuit check

A very small portion  $e_c$  of the voltage from the "B" battery  $B_8$  is impressed on the grid of the electrometer tube VT when the switch is turned to the circuit check position. This voltage  $e_c$  is selected to make the meter read approximately full scale. Deterioration of any of the components or batteries in the circuit will change this reading. This voltage can, therefore, be used to check the entire circuit with the exception of the ionization chamber and high-meg resistor.

## 2.5 zero controls

The voltage  $e_p$  developed across resistors  $R_a$  and  $R_i$  produces a current  $i_a$  through  $R_a$ , the meter  $M$ , and  $R_i$ . The variable resistor  $R_c$  (COARSE ZERO control) is adjusted at the factory to make the current  $i_a$  equal and opposite to the plate current  $i_p$  when the grid voltage is zero. Thus, the meter reads zero when there is no radiation. Small adjustments to zero the instrument in a radiation field are made by turning the range switch to the ZERO position to ground the current from the ionization chamber and thus simulate the "no radiation" condition. The variable resistor  $R_z$  (ZERO) is then adjusted to make the meter read zero.

## 3.0 INSTALLATION

### 3.1 inspection

The instrument is shipped with the batteries packed separately to prevent damage to the instrument from battery leakage.

Inspect the instrument carefully for any signs of damage in shipment. If any damage is apparent, the batteries should not be installed until an electrical check is made to prevent a short circuit causing further damage.

### 3.2 batteries

Remove the toggle clamps holding the lower case and open the case. Note that compartments molded into the lower case locate and hold the batteries. The batteries must be installed in their proper positions to permit replacing the lower case.

*Observe the polarity markings at each battery contact.*

Install the batteries in their proper positions and check to see that the battery contacts apply pressure to the battery terminals. If the pressure appears insufficient to insure good contact, remove the battery and squeeze the contacts together slightly to increase the contact pressure.

When the batteries are installed, turn the range switch to the ZERO position and adjust the ZERO control to make the meter read zero. Turn the range switch to the CIRCUIT CHECK position and see that the meter reads within the red circuit check markings. If these indications can not be obtained, refer to section 7.5 for trouble shooting procedures.

If the circuit check indication is proper, replace the lower case and fasten the toggle clamps.

The instrument is now ready for operation. If the shoulder strap is required, snap the metal fasteners onto the buttons provided on each end of the instrument and adjust the buckle to the desired length.

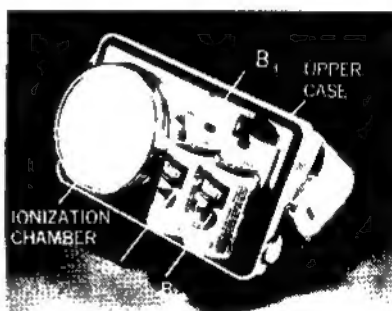


Figure 2 — The Jordan 710-4  
with lower case removed

## 4.0 OPERATION

### 4.1 operational checks

Turn the range switch to the ZERO position, wait a minute or two for the electrometer tube to warm up and adjust the ZERO control to make the meter read zero.

Turn the range switch to the CIRCUIT CHECK position. The meter should read within the red band marked CIRCUIT CHECK. If it does not, the batteries may be dead, or trouble may exist in the circuit. See sections 5 and 7 for maintenance procedures. When the batteries are new, the meter should read near the top of the circuit check band. When the reading nears the bottom of the band, the batteries should be replaced.

The CIRCUIT CHECK does not test the chamber or the high-meg resistors.

### 4.2 taking readings

Turn the range switch to the X-100, X-10 or X-1 range as required and read the radiation intensity indication on the meter. The meter readings must be multiplied by the factor for the range being used. For example, a meter reading of .35 on the X-10 range indicates 3.5 r/hr. On the X-100 range the intensity would be 35 r/hr.

When several readings will be taken in an hour, or the instrument will be used frequently during a day, it is advisable to leave it turned on during the entire period of use.

The instrument is equally sensitive to radiation from the sides, front and bottom.

## 5.0 OPERATOR'S MAINTENANCE

### 5.1 battery replacement

The batteries should be replaced when the CIRCUIT CHECK setting on the range switch makes the meter read near the low end of the CIRCUIT CHECK band.

To replace batteries, remove the toggle clamps and the lower case and remove the old batteries. These should be discarded immediately to prevent their being inadvertently re-used. Inspect the battery contacts and clean if necessary. Install new batteries as described in section 3.2.

If the batteries are to be removed and reinstalled, be sure that  $B_1$  and  $B_2$  are not interchanged. A voltmeter check will show that the voltage of  $B_2$  is always higher than that of  $B_1$ .

### 5.2 cleaning

**WARNING:** *Do not use cleaning solvents on the plastic parts.*

To clean the case, use soap and water. If the batteries have leaked, remove the lower case and fill only the battery compartment with warm water. The battery "goo" will be loosened in a short while and can be easily rinsed out. Be careful not to soak off the circuit diagram or the CD decal.

## 6.0 PREVENTIVE MAINTENANCE

Preventive maintenance is required once every six months of storage, once every month of occasional use, or prior to any critical period of use.

The batteries should be removed and checked for corrosion and cleaned if necessary. The battery contacts in the instrument should be carefully cleaned if necessary. Any leaking batteries should be discarded and replaced.

Check the calibration against a standard gamma source and adjust if necessary according to the instructions in section 7.

If the instrument is to be stored for more than a few weeks, the batteries should be removed and stored separately.

## 7.0 CORRECTIVE MAINTENANCE

### 7.1 tools required

Two tools are required to disassemble the instrument partially for minor maintenance:

- A  $\frac{1}{2}$ " nut driver for the switch and zero control nuts, and
- a  $\frac{3}{8}$ " nut driver to remove the high-meg compartment.

For complete maintenance, the following should be available:

- a. A  $\frac{3}{16}$ " nut driver for the meter terminals.
- b. A small Phillips screwdriver for the screws that mount the meter.
- c. A 20,000 ohm per volt multimeter such as the Simpson 260.
- d. A small soldering iron and solder.
- e. A pair of diagonal cutters and small long-nose pliers.

### 7.2 disassembly

The instrument may be partially or completely disassembled in the following steps:

- a. Remove the toggle clamps and the lower case.  
Pull off the switch knob and remove the nut holding the switch.  
**DO NOT LOOSEN ANY SCREWS.**
- b. Hold the handle and press down on the switch shaft to remove the chassis from the upper case.
- c. Place the chassis in the lower case to hold the batteries in position and place the upper case next to it as shown in figure 3.

The instrument is now sufficiently disassembled to make voltage checks and inspect some of the components. Place the instrument with the ionization chamber on the left and all circuit components will be located as shown in the circuit diagram figure 4.

To remove the high-meg housing, remove the two small nuts on the switch mechanism, lift out the switch mechanism and remove the two spacers below it. Now lift off the high-meg housing.

**NOTE:** *Because the electrometer tube is sensitive to light, the instrument will not measure radiation accurately when the high-meg housing is open.*



To re-assemble the instrument, follow the above steps in the reverse order. When replacing the switch mechanism, be sure the switch rotor is in the position that it was in when the switch mechanism was removed.

### 7.3 calibration

A calibrated source of radioactive material should be used to calibrate the instrument. Cobalt-60 and Radium sources are most commonly used. If the radiation intensity of the source is unknown, a secondary standard instrument such as a Condenser R Meter can be used to calibrate the source.

The *Jordan 710-4* can be calibrated on any of its three ranges and the other two will automatically be calibrated. A convenient radiation intensity to use is 0.35 r/hr. A 20 mc. Radium source will produce this intensity at 8.62 inches. All measurements must be made from the center line of the chamber, the location of which is indicated by a small raised line on each side of the lower case. The source should be no closer than 6 inches from this mark.

Prior to recalibrating the instrument, install a new set of batteries. Set the range switch to the ZERO position, turn the ZERO control clockwise to the stop and adjust the COARSE ZERO control to make the meter read 0.4. Re-zero the instrument with the ZERO control.

Check the calibration with the instrument in the case. Remove the instrument and adjust the CALIBRATE control as required. Replace the instrument in the case and check the reading. Repeat this procedure until the correct reading is obtained. If a large source is available, the high ranges should also be checked.

### 7.4 batteries

The "B" battery and "D" cells are tested by use of the circuit check feature. If trouble occurs, however, the batteries should be tested separately with a voltmeter. The voltages should be as follows:

	New	After 200 Hours
B <sub>1</sub>	1.55V	1.25V
B <sub>2</sub>	1.55V	1.55V
B <sub>3</sub>	23V	15V

### 7.5 trouble shooting

Seven of the eight significant voltages in the circuit can be measured by removing only the lower case. Voltages can be measured from the chassis to each of the battery contacts. The plate of the electrometer tube is connected to the small washer under the center of B<sub>2</sub>. Measurements can be made at this point by moving B<sub>2</sub> in its contacts about 1/4" to the back of the instrument. It is recommended that these measurements be made before the instrument is disassembled for further trouble shooting.

All components with the exception of the high-meg resistors and the electrometer tube are similar to parts used in radio and television sets and most radio servicemen and radio amateurs can test them.

Voltages can be checked with those shown on the circuit diagram. Batteries must be removed before making resistance or continuity checks.

The high-meg resistors cannot be checked with standard radio test equipment but can be assumed to be functioning properly if they are not dirty or damaged.

**CAUTION:** *Do not handle the high-meg resistors, the ceramic switch deck, or the electrometer tube. Touch them only with clean tools.*

*Do not unsolder the red wire from the shell connection of the ionization chamber. This will destroy the hermetic seal. Disconnect the other end of this wire if necessary.*

The following symptoms and suggested corrective procedures will be helpful in trouble shooting the *Jordan 710-4*.

---

<b>will not zero</b>	<b>CORRECTIVE PROCEDURE</b>
Dead batteries	Replace all batteries
Dirty battery contact	Inspect and clean battery contacts
Loose battery contact	Check contact pressure and squeeze battery contacts together to increase pressure if necessary
Coarse zero control disturbed	Readjust according to instructions in section 7.3
Electrometer tube filament open	Remove batteries, set range switch to ZERO, measure resistance between battery contacts. Should be approximately 150Ω.
Open potentiometer	Check potentiometers with ohmmeter
Open resistor	Check resistors with ohmmeter
Open connection	Inspect all solder joints and wiring
Open switch contact	Check switch contacts, clean and, if necessary, adjust contacts
Short circuit	Inspect for mechanical damage

---

---

**no reading****CORRECTIVE PROCEDURE****Dead batteries****Replace batteries****Dirty battery contact****Inspect and clean battery contacts****Loose battery contact****Check contact pressure and squeeze battery contacts together to increase pressure if necessary.****Meter damaged****Replace meter****Open connection****Inspect all solder joints and wiring****reads low****Calibration control disturbed****Check calibration as outlined in 7.3****Calibration control open****Check calibration control with ohmmeter****Dead electrometer****Replace with new 5886****Dirty high-meg components****Clean the high-meg resistors, ceramic deck, electrometer tube, and chamber insulator with pure dry alcohol****Meter damaged****Replace meter****reads high****Calibration control improperly adjusted****Check calibration as outlined in 7.3****If high reading is on only one range, a high meg resistor may be damaged.****Replace suspect high-meg resistor**

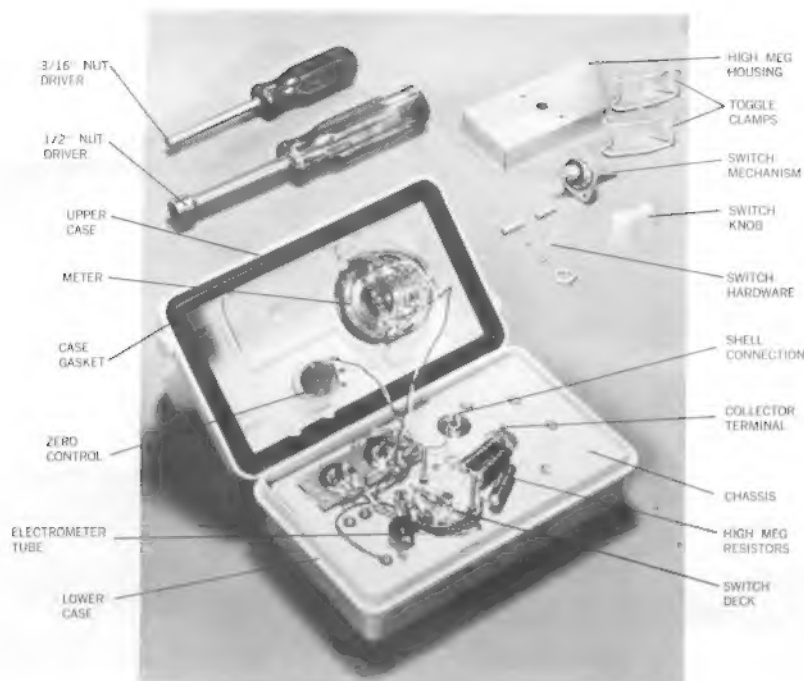


Figure 3—The Jordan 710-4 Disassembled for Servicing

## 8.0 REPLACEABLE PARTS

### 8.1 mechanical components

No. Req'd	Description and Function	Jordan Part No.
1	Case assembly, upper . . . . .	AP-0006
1	Case assembly, lower . . . . .	AP-0005
1	Knob assembly, switch . . . . .	AP-0010
1	Knob, zero . . . . .	MP-0016
2	Clamp, toggle . . . . .	AA-0001
1	Shield, high-meg . . . . .	MS-0255
1	Gasket, case . . . . .	HG-0039
1	Gasket, meter . . . . .	HG-0043
1	Strap assembly, shoulder . . . . .	AP-0011

## 8.2 maintenance supply parts

Suggested supply for five instruments for one year of operation:

<i>Qty.</i>	<i>Circuit Symbol</i>	<i>Description and Function</i>	<i>Jordan Part No.</i>
5	B <sub>1</sub>	"D" cell, filament supply . . . . .	BA-0005
5	B <sub>2</sub>	"D" cell, bias supply . . . . .	BA-0005
5	B <sub>3</sub>	"B" battery, plate supply . . . . .	BA-0006
1	VT	Vacuum tube, electrometer, 5886 . . . . .	VT-5886
1	M	Meter, indicating . . . . .	EI-0013
1	R <sub>1</sub>	Resistor, high-meg, Range X-1 . . . . .	RX-0007
1	R <sub>2</sub>	Resistor, high-meg, Range X-10 . . . . .	RX-0008
1	R <sub>3</sub>	Resistor, high-meg, Range X-1000 . . . . .	RX-0009
1	R <sub>7</sub>	Potentiometer, zero control . . . . .	RP-0103
1		Case assembly, upper . . . . .	AP-0006
1		Case assembly, lower . . . . .	AP-0005
1		Knob assembly, switch . . . . .	AP-0010
1		Knob, zero . . . . .	MP-0016
2		Clamp, toggle . . . . .	AA-0001

## 8.3 names and addresses of manufacturers

NATIONAL CARBON CO.  
30 East 42nd Street  
New York 17, N. Y.


CENTRALAB  
900 E. Keefe Ave.  
Milwaukee 1, Wisconsin

RESISTANCE PRODUCTS COMPANY  
914 South 13th Street  
Harrisburg, Pennsylvania

P. R. MALLORY & CO., INC.  
3029 E. Washington  
Indianapolis 6, Indiana

INTERNATIONAL RESISTANCE CO.  
401 North Broad Street  
Philadelphia, Pennsylvania

PHAOSTRON INSTRUMENT AND  
ELECTRONIC CO.  
151 Pasadena Ave.  
South Pasadena, California

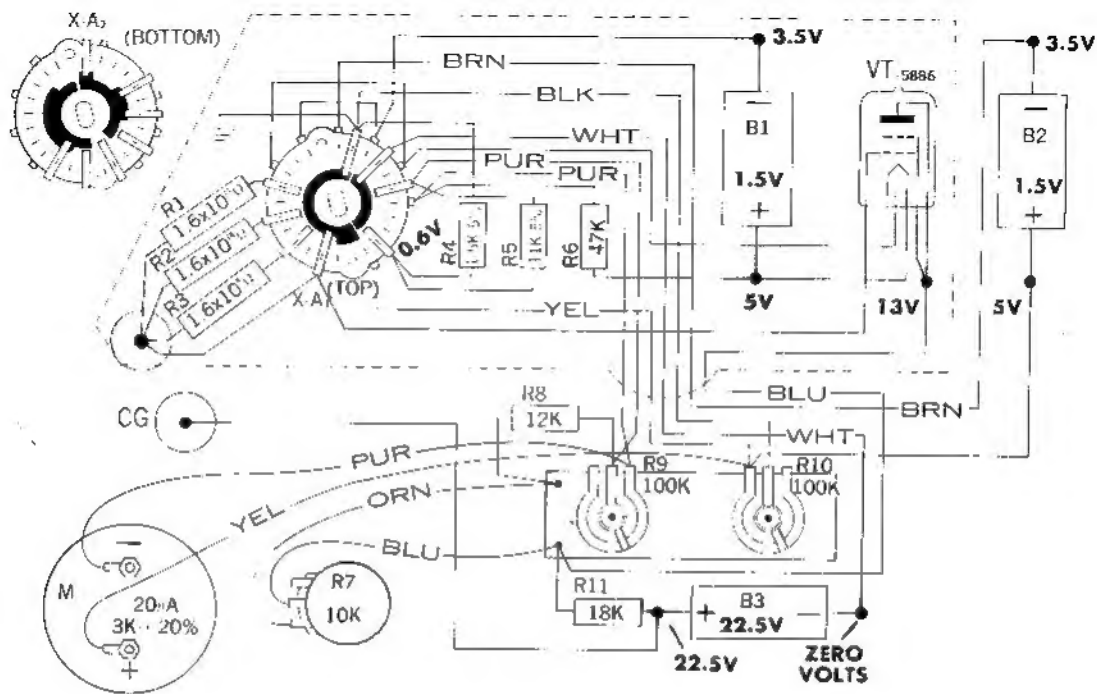

Resistors  $\pm 10\%$ . Controls  $\pm 20\%$  unless otherwise noted.  
Switch shown in OFF position.

*Shaded terminals available inside lower case.*

Voltages shown are nominal and are measured from the chassis with a 20,000 ohms per volt meter set to the lowest practical range. Set switch to ZERO position.

Figure 4 - Wiring Diagram

## 8.4 electrical components

<i>Circuit Symbol</i>	<i>Description and Function</i>	<i>Manufacturer</i>	<i>Mjr's Type No.</i>	<i>Jordan Part No.</i>
B <sub>1</sub>	1.5V "D" cell, filament supply . . . . .	National Carbon Co.	950	BA-0005
B <sub>2</sub>	1.5V "D" cell, bias supply . . . . .	National Carbon Co.	950	BA-0005
B <sub>3</sub>	22.5V "B" battery, plate supply . . . . .	Jordan	J-15	BA-0006
R <sub>1</sub>	Resistor, high-meg 160,000 meg 10%, Range X-1 . . . . .	RPC	BBF	RX-0007
R <sub>2</sub>	Resistor, high-meg 16,000 meg 10%, Range X-10 . . . . .	RPC	BBF	RX-0008
R <sub>3</sub>	Resistor, high-meg 1,600 meg 10%, Range X-100 . . . . .	RPC	BBF	RX-0009
R <sub>4</sub>	Resistor, carbon 1.5K 5% ½ W circuit check . . . . .	IRC	BTS	RC-0152C
R <sub>5</sub>	Resistor, carbon 11K 5% ½ W bias . . . . .	IRC	BTS	RC-0113C
R <sub>6</sub>	Resistor, carbon 47K 10% W shunt . . . . .	IRC	BTS	RC-0473
R <sub>7</sub>	Potentiometer, carbon 10K 20% ½ W zero control . . . . .	Centralab.	Model 2	RP-0103
R <sub>8</sub>	Resistor, carbon 12K 10% ½ W plate load . . . . .	IRC	BTS	RC-0123
R <sub>9</sub>	Potentiometer, carbon 100K 20% ½ W calibrate adj. . . . .	Mallory	ECD	RX-0010
R <sub>10</sub>	Potentiometer, carbon 100K 20% ½ W coarse zero adj. . . . .			
R <sub>11</sub>	Resistor, carbon 18K 10% ½ W plate dropping . . . . .	IRC	BTS	RC-0183
CG	Ionization chamber assembly . . . . .	Jordan		AE-0026
M	Meter, indicating 20 $\mu$ a 3000 $\Omega$ . . . . .	Phaotron	220	EI-0013
VT	Vacuum tube, electrometer, 5886 . . . . .	Raytheon	5886	VT-5886
X-A	Switch deck, ceramic, range switch . . . . .	Jordan		SD-0019
X-A <sub>2</sub>				